



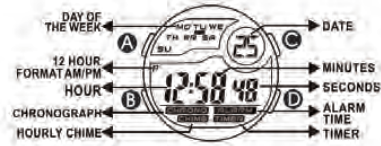

## REGULAR DISPLAY AND BUTTON OPERATION



## HOW TO CHANGE THE DISPLAY MODE

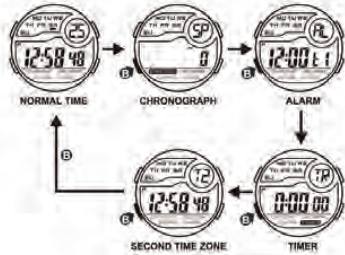


## HOW TO DISPLAY CALENDAR




## HOW TO USE EL LIGHT




## HOW TO SET NORMAL TIME

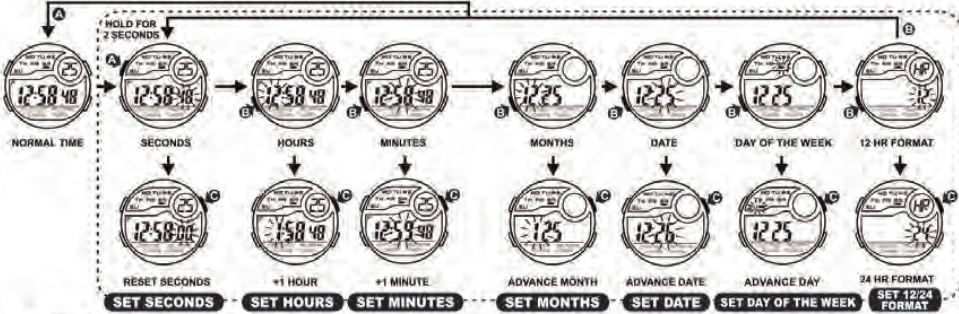


## HOW TO SET NORMAL TIME

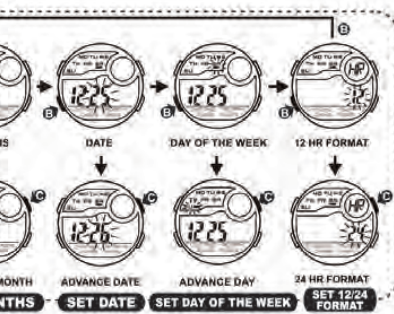


## HOW TO SET ALARM TIME

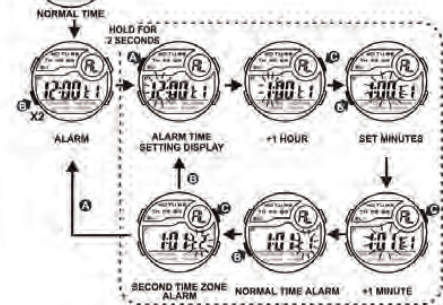


## HOW TO USE ALARM AND CHIME DISPLAY

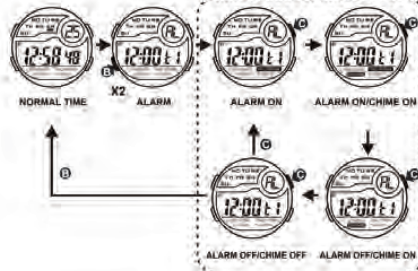


## HOW TO USE THE CHRONOGRAPH

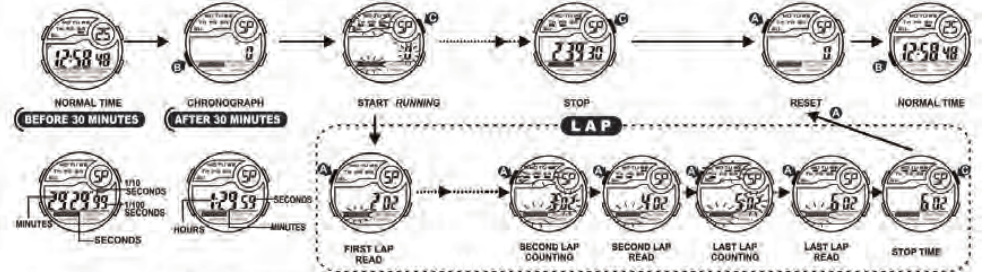


## HOW TO USE THE CHRONOGRAPH

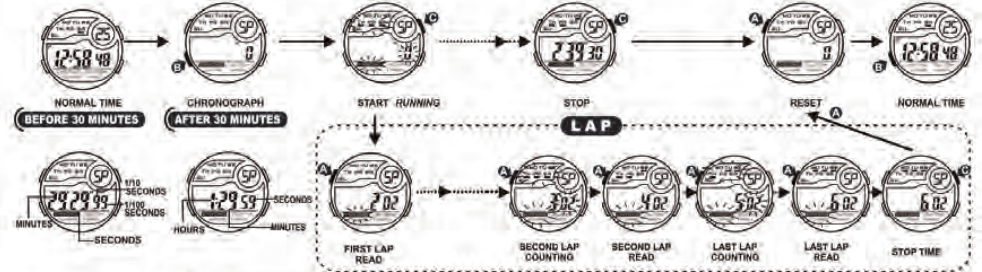


## HOW TO USE TIMER

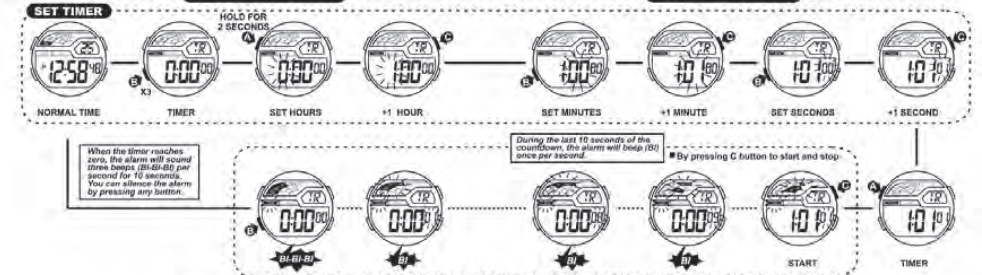


## HOW TO USE TIMER

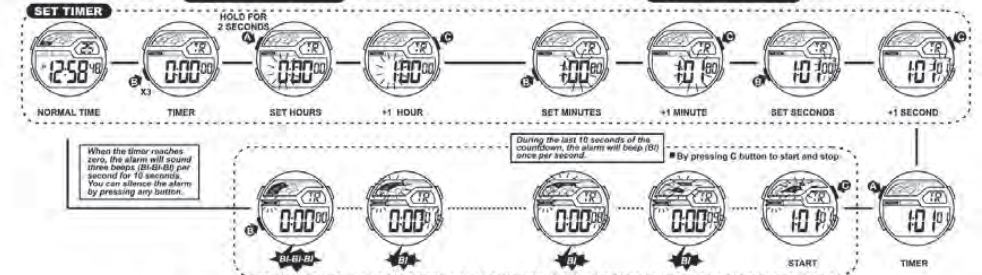


## HOW TO USE TIMER

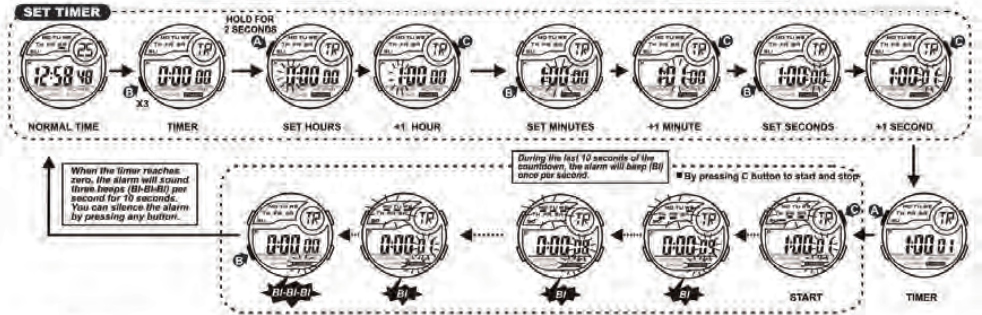

## HOW TO USE TIMER

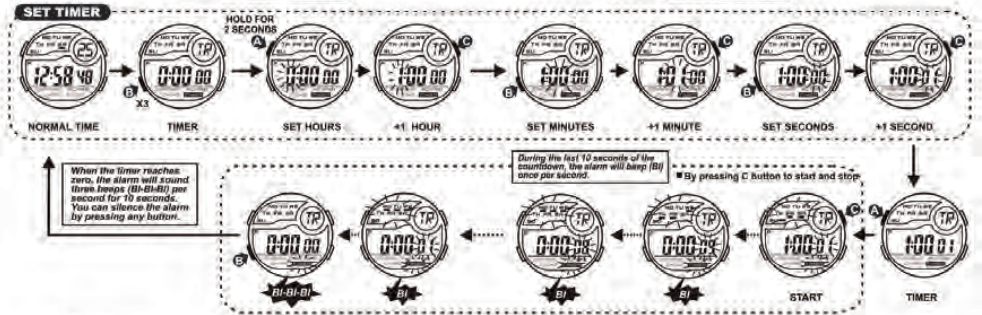

## HOW TO SET SECOND TIME ZONE

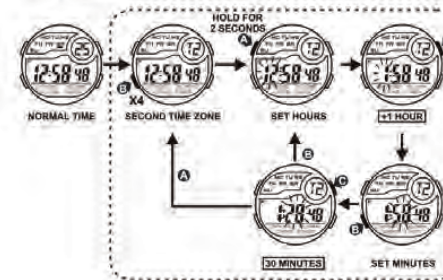

## FEATURES AND SPECIFICATIONS

- Standard display mode: Hour, Minutes, Seconds, Month, Day of the week.
- Function:
  - Month, Date AM/PM and Electro-Luminescent light.
  - Alarm function with buzzer signal output.
  - Chronograph function with lap operation.
  - Hourly chime.
  - 12/24 hour format switch option.
  - Timer.
  - Second time zone.
- Accuracy at normal temperature (25°C): ± 30 seconds a month.
- Normal operating temperature range: 10°C - 40°C.