





X1112 RADIAL

REGULAR DISPLAY AND BUTTON OPERATION

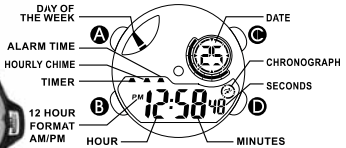


BUTTON OPERATION	
A SET	C ADJUST, START/STOP
B MODE	D LIGHT


HOW TO CHANGE THE DISPLAY MODE

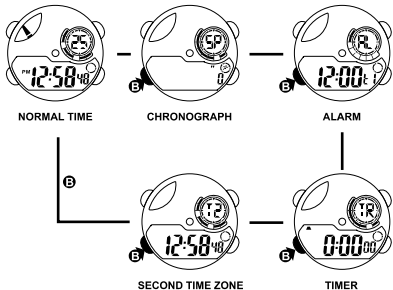


HOW TO DISPLAY CALENDAR

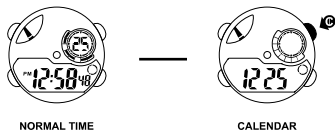


HOW TO SET NORMAL TIME

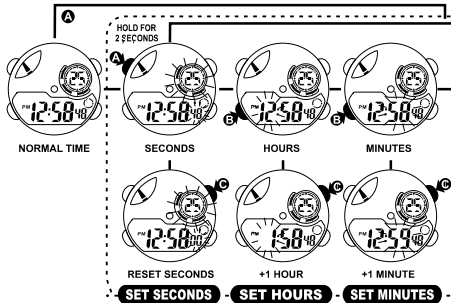


HOW TO SET NORMAL TIME

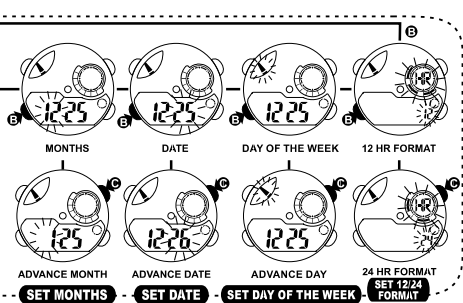



HOW TO SET ALARM TIME

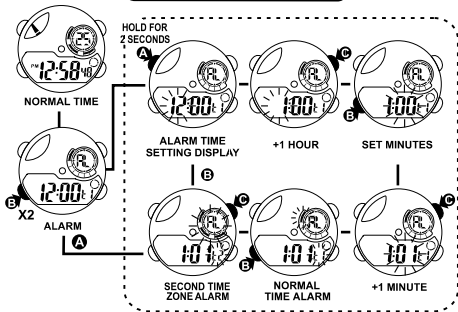



HOW TO USE ALARM AND CHIME DISPLAY

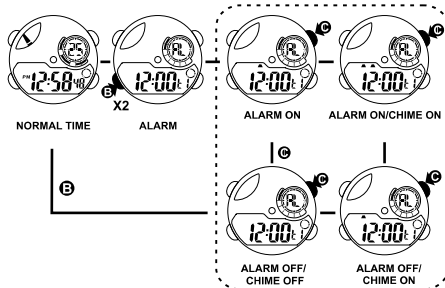

HOW TO USE THE CHRONOGRAPH

  

BEFORE 30 MINUTES **AFTER 30 MINUTES**

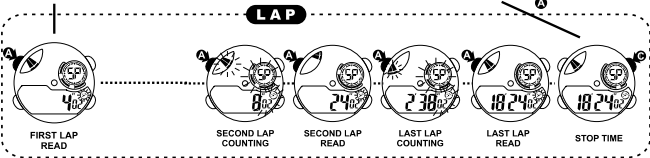 

HOW TO USE TIMER

SET TIMER

HOLD FOR
2 SECONDS



NORMAL TIME



TIMER



SET HOURS



 
+1 HOUR



SET MINUTES



+1 MINUTE



SET SECONDS



+1 SECOND

When the timer reaches zero, the alarm will sound three beeps (BI-BI-BI) per second for 10 seconds. You can silence the alarm by pressing any button.



BI-BI-BI



BI



 
BI



BI



START




TIMER


During the last 10 seconds of the countdown, the alarm will beep (BI) once per second.

By pressing C button to start and stop

HOW TO SET SECOND TIME ZONE

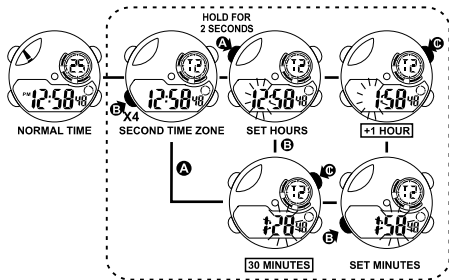

HOW TO USE EL LIGHT

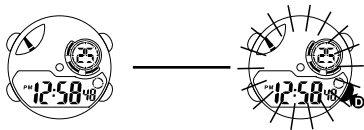

NOTE:

1. This watch features an electro-luminescent (EL) backlight, which tends to lose illuminating power after very long use.
2. The illumination provided by backlight may hard to see under direct sunlight.