



# X8208G1 CHARGER


## REGULAR DISPLAY AND BUTTON OPERATION




### BUTTON OPERATION

- |        |                      |
|--------|----------------------|
| Ⓐ SET  | Ⓒ ADJUST, START/STOP |
| Ⓑ MODE | Ⓓ LIGHT              |


## HOW TO CHANGE THE DISPLAY MODE

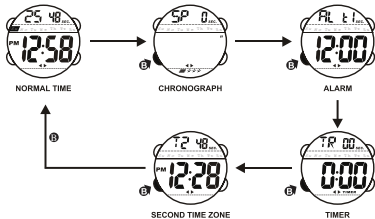


## HOW TO DISPLAY CALENDAR

 


## HOW TO SET NORMAL TIME

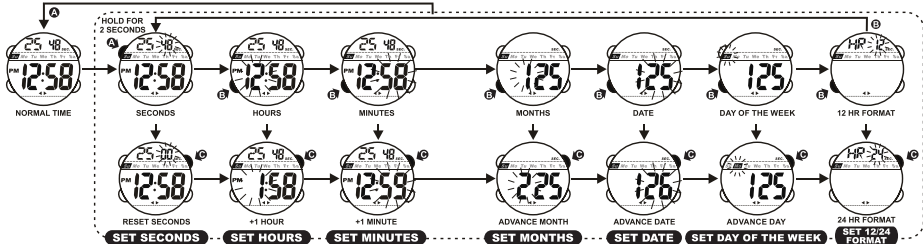

## HOW TO SET ALARM TIME

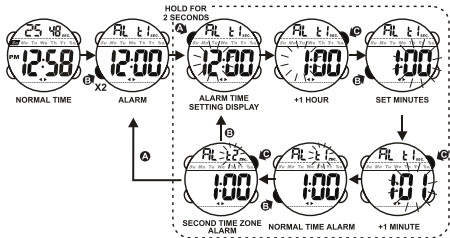

## HOW TO USE ALARM AND CHIME DISPLAY

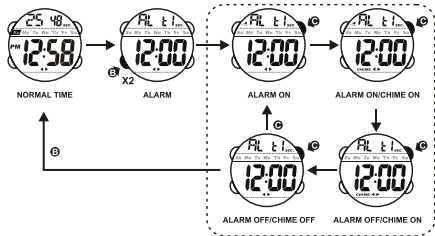

## HOW TO USE THE CHRONOGRAPH




### BEFORE 30 MINUTES



### AFTER 30 MINUTES




## HOW TO USE THE CHRONOGRAPH

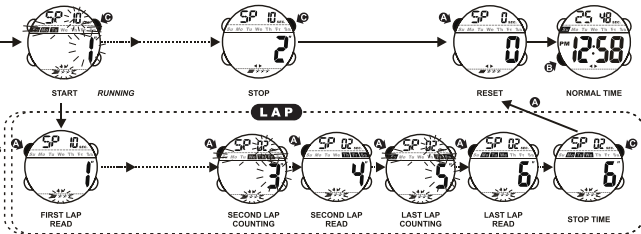

## HOW TO USE TIMER

## HOW TO USE TIMER
 
### SET TIMER




When the timer reaches zero, the alarm will sound three beeps (BI-BI-BI) per second for 10 seconds. You can silence the alarm by pressing any button.

During the last 10 seconds of the countdown, the alarm will beep (BI) once per second.


By pressing C button to start and stop



## HOW TO SET SECOND TIME ZONE

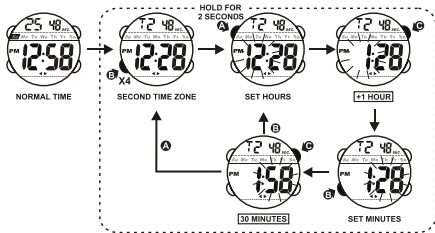

## HOW TO USE EL LIGHT

 

### NOTE:

1. This watch features an electro-luminescent (EL) backlight, which tends to lose illuminating power after very long use.
2. The illumination provided by backlight may hard to see under direct sunlight.