



X9606 REEF


REGULAR DISPLAY AND BUTTON OPERATION



BUTTON OPERATION

- | | |
|---------------|-----------------------------|
| A SET | C ADJUST, START/STOP |
| B MODE | D LIGHT |


HOW TO CHANGE THE DISPLAY MODE

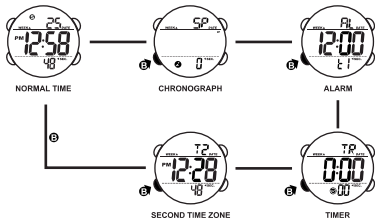

HOW TO DISPLAY CALENDAR




HOW TO SET NORMAL TIME

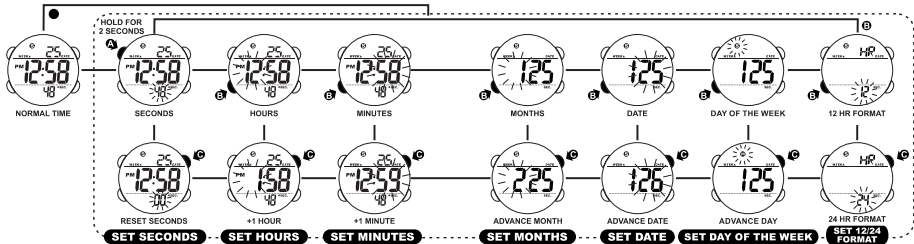


HOW TO SET NORMAL TIME

HOW TO SET ALARM TIME

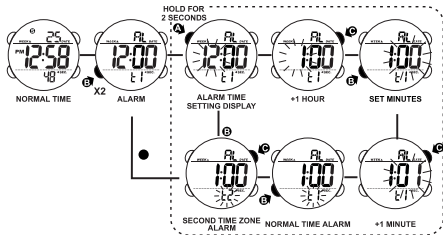

HOW TO USE ALARM AND CHIME DISPLAY

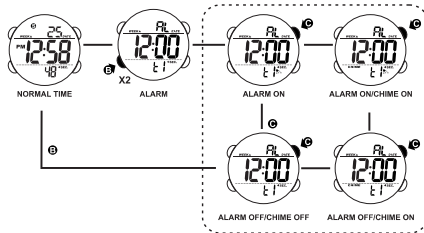

HOW TO USE THE CHRONOGRAPH



NORMAL TIME



CHRONOGRAPH



START RUNNING



STOP



RESET



NORMAL TIME

BEFORE 30 MINUTES




AFTER 30 MINUTES




HOW TO USE THE CHRONOGRAPH

LAP

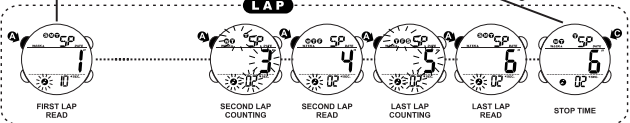


HOW TO USE TIMER

 
SET TIMER




HOW TO USE TIMER

 

 When the timer reaches zero, the alarm will sound three beeps (Bi-Bi-Bi) per second for 10 seconds. You can silence the alarm by pressing any button.




 During the last 10 seconds of the countdown, the alarm will beep (Bi) once per second.




By pressing C button to start and stop

HOW TO SET SECOND TIME ZONE

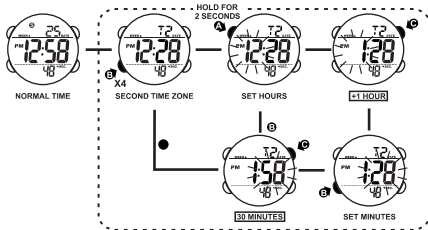

HOW TO USE EL LIGHT

 

NOTE:

1. This watch features an electro-luminescent (EL) backlight, which tends to lose illuminating power after very long use.
2. The illumination provided by backlight may hard to see under direct sunlight.