


X1114 KAILANI




REGULAR DISPLAY AND BUTTON OPERATION

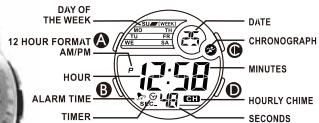

BUTTON OPERATION

- | | |
|----------|------------------------|
| (A) SET | (C) ADJUST, START/STOP |
| (B) MODE | (D) LIGHT |

HOW TO CHANGE THE DISPLAY MODE

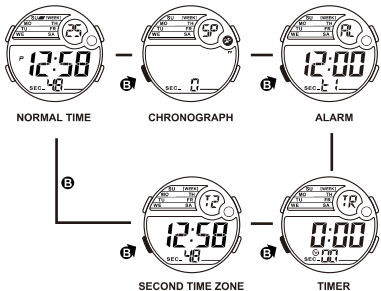


HOW TO DISPLAY CALENDAR




HOW TO SET NORMAL TIME


HOW TO SET NORMAL TIME

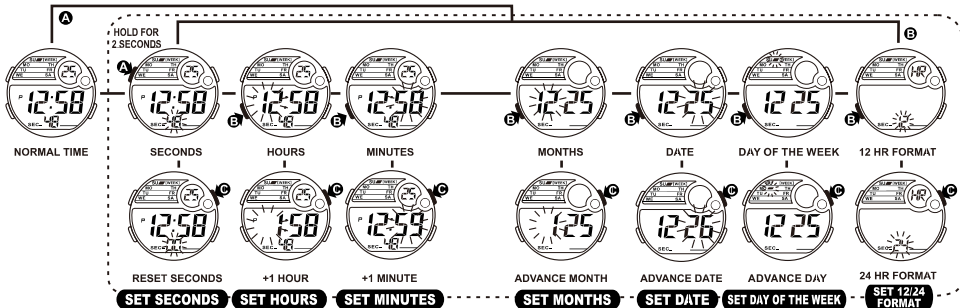

HOW TO SET ALARM TIME

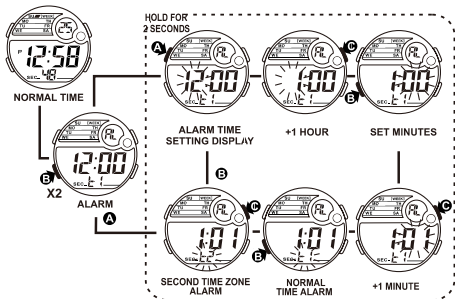


HOW TO USE ALARM AND CHIME DISPLAY

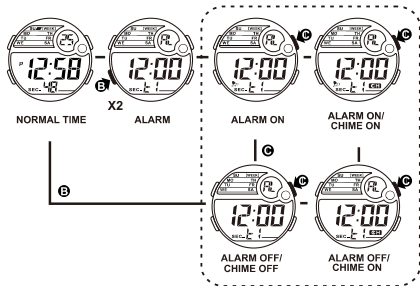

HOW TO USE THE CHRONOGRAPH



NORMAL TIME




CHRONOGRAPH



START *RUNNING*



STOP



RESET




NORMAL TIME

BEFORE 30 MINUTES

AFTER 30 MINUTES




LAP

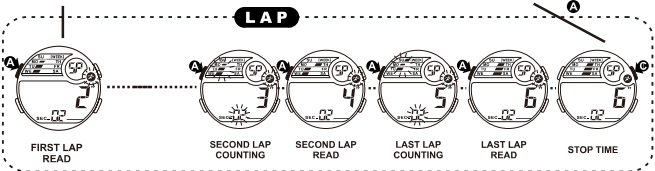


HOW TO USE TIMER

SET TIMER




HOW TO USE TIMER




When the timer reaches zero, the alarm will sound three beeps (BI-BI-BI) per second for 10 seconds. You can silence the alarm by pressing any button.

During the last 10 seconds of the countdown, the alarm will beep (BI) once per second.


■ By pressing C button to start and stop

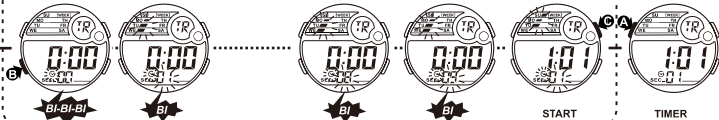

HOW TO SET SECOND TIME ZONE

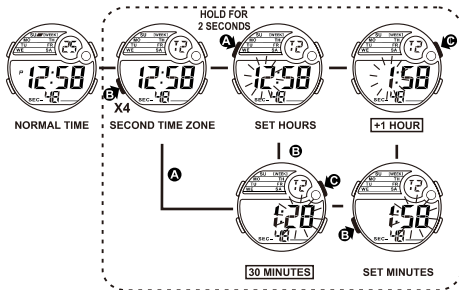

HOW TO USE EL LIGHT



NOTE:

1. This watch features an electro-luminescent (EL) backlight, which tends to lose illuminating power after very long use.
2. The illumination provided by backlight may hard to see under direct sunlight.